


RECON Truck Accessories

Install Guide for 264157 Series cab roof lights

- You will need to cut $\frac{3}{4}$ " x $\frac{3}{4}$ " square holes to install the 264157 series cab lights. This can be done by drilling a $\frac{3}{4}$ " hole first and then squaring out the corners with a Dremel or other high speed cutting tool.
- After cutting the holes, you will need to locate the 4 pin washers and screws and install one on each cab light mounting point as shown in the picture below. Please note that you only want to hand tighten the washers at this point.
- Once the washers are installed, insert the cab lights into place until the front and rear tabs on the mounting point 'click' into place on the roof.
- Once each cab light is firmly locked into place, tighten the screws to finalize the installation. The 4 pin washer will then spread to lock the cab light onto the roof.



The OEM measurements for the cab lights are shown below. The center of the screw hole for the side lights is 4 1/8" to the side of the cab and 6 1/16" to the front edge of the windshield. The measurements shown below are from the edge of each light to the edge of the cab.

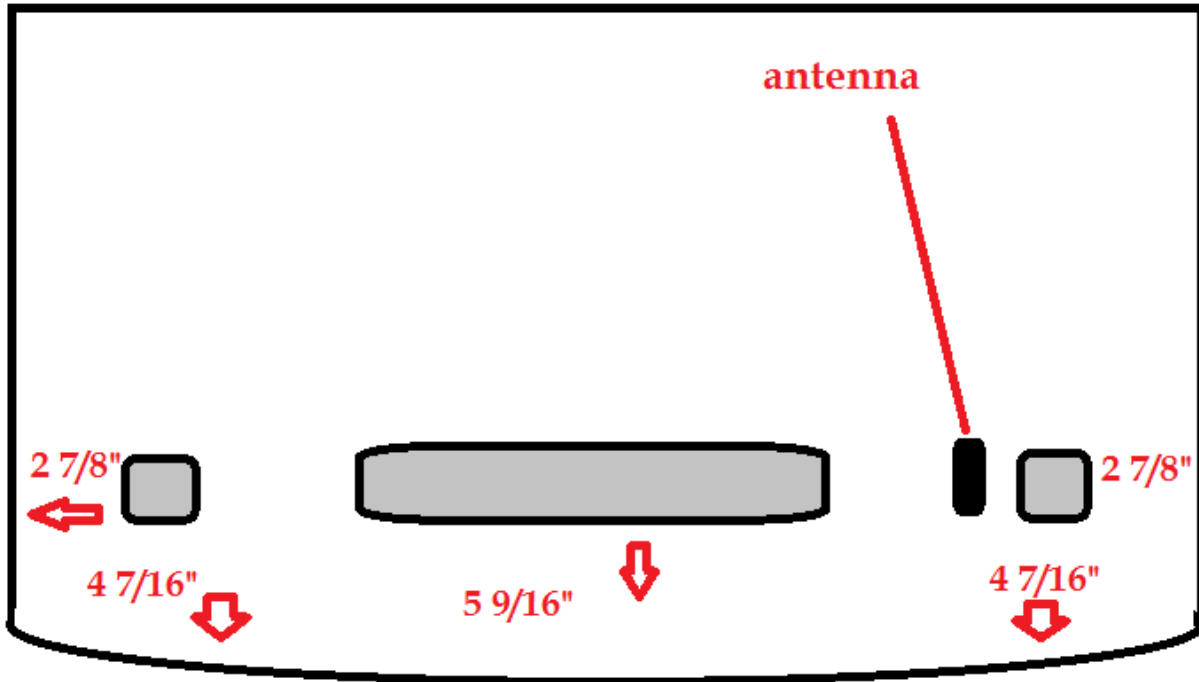

RECON

Get Lit!